

# FOLDABLE WAGON INSTRUCTION

# HART

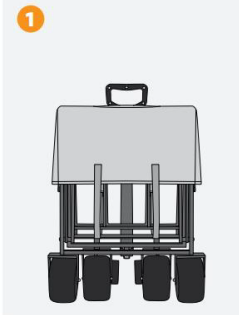
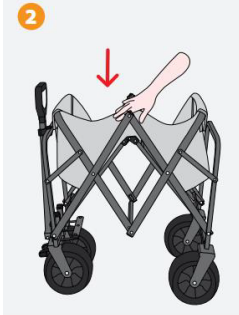

SPORT




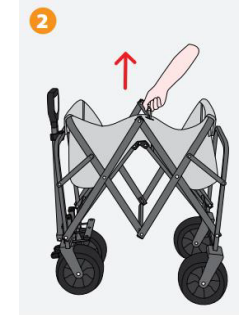
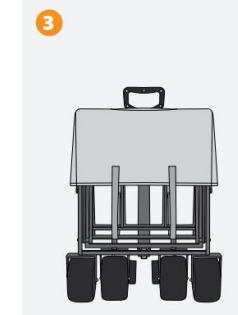
## ! WARNING

1. This product is not a toy. Suitable for schools, sporting clubs, camping, shopping or going to the beach.
2. Store in a cool dry place.
3. Please do not drag the product with a car, bicycle, or a motorcycle.
4. For use by adults only!
5. The color of the bag cloth might become faded, please wash it alone to help prevent from the bag's colors bleeding out into your other laundry.
6. We will not be liable for any direct or indirect personal injury or property damage resulting from incorrect use or incorrect assembly.

## Open

 <p>1</p>	 <p>2</p>	 <p>3</p>
Remove wagon from storage sleeve and open the hook & loop.	Spread the wagon frame open and allow it to come to a fully extended position.	Finish.

## Close

 <p>1</p>	 <p>2</p>	 <p>3</p>
Use caution near moving parts to prevent pinching.	Pull loop in the middle of wagon straight up.	Put the storage sleeve on.

4-535