


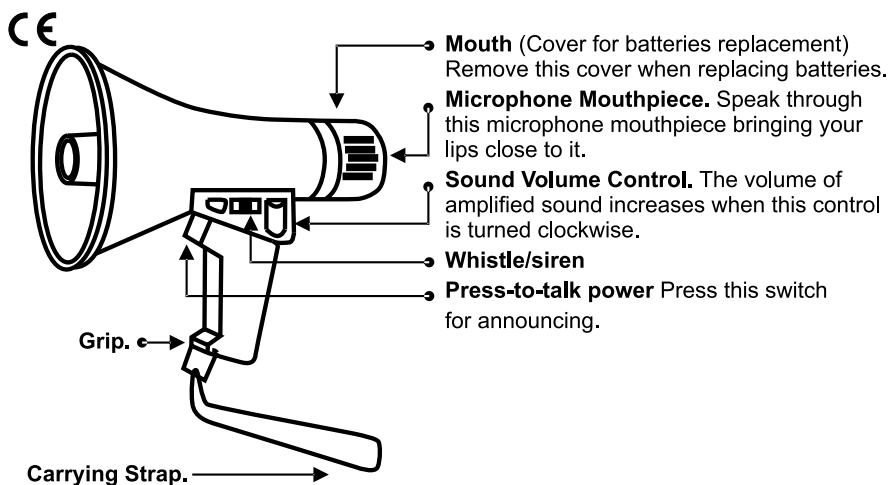

WHEN MAKING AN ANNOUNCEMENT

1. Hold the megaphone at the grip and press the trigger switch with your index finger.
2. Position the megaphone towards the object, and speak through the microphone mouthpiece. Bring the microphone close to your lips and speak with a clear, normal voice.
3. Turn the sound volume control at the back of the grip, and adjust the sound level to optimum without causing howling.




SPECIFICATIONS

- **Power source:** 6 x AA batteries (not included)
- **Battery Life:** Approx 8 hours (talk)
Approx 40 minutes (Continuous Signaling)
- **Audible Range:** 500m – 700m (depending on operating conditions)
- **Dimensions and Weight:**
Mouth diameter 150mm,
Length 237mm, Weight 620g

BATTERY LOADING

1. Remove the battery case and put in six AA batteries with correct polarity.
2. After putting the batteries in, insert the battery case into the battery compartment on the megaphone with correct polarity.
3. Refit the battery cover.

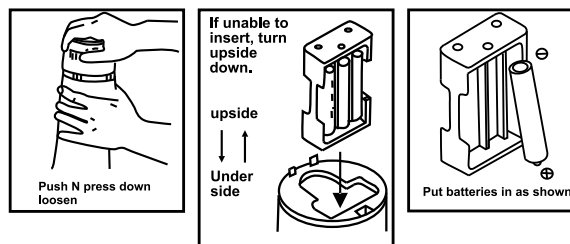

CAUTIONS

1. Be sure to put the batteries in with correct polarity.
2. When the megaphone is not being used for a long period remove batteries.
3. Refit the battery cover.