


MAKING AN ANNOUNCEMENT

- When carrying the microphone on the shoulder, press the (1) press-to-talk power on-off switch on the left side of the microphone.
- 2. When holding the megaphone at the grip, fix the microphone hanger inlet in the microphone fixing habger, then press the (2) press-to-talk power on-off switch back with your index finger.
- 3. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
- 4. Turn the sound volume control, on the right hand side of the microphone and adjust the sound level to optimum without causing howling.



FEATURES

- Megaphone for hand held or shoulder-slung use (strap supplied)
- Detachable anti-howl microphone on coiled lead with with on-off switch and volume control.
- Metal and ABS construction

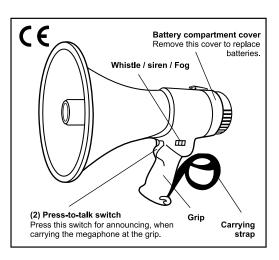

SPECIFICATIONS

- Power source:

 Option A: 8 x Size C batteries
 (not included)
 Option B: 3 x Size 18650
 rechargeable batteries (not included)
- Audible Range: 500m-700m (depending on operating conditions)
- Weight: 1.65kg (excluding batteries)
- Dimensions: 230mm diameter, Length 340mm

BATTERY LOADING

- 1. Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.
- 2. Option A: Remove the black battery casing and insert eight size C batteries in the clear battery cases, observing the correct polarity.
 - Option B: Insert three size 18650 rechargeable batteries in the black battery casing.
- 3. Insert the battery case with batteries into the battery compartment of the megaphone observing correct polarity,

CAUTIONS

- 1. Make sure the batteries are inserted correctly, observing correct polarity.
- 2. Remove the batteries when the megaphone is not in use for a long period of time.
- Drained batteries do not give sufficient sound volume. Replace the batteries at regular intervals.

