 
 
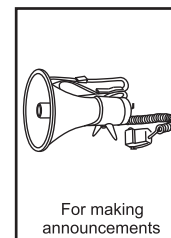 


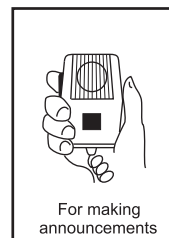


MAKING AN ANNOUNCEMENT

1. When carrying the microphone on the shoulder, press the (1) press-to-talk power on-off switch on the left side of the microphone.
2. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
3. Turn the sound volume control, on the right hand side of the microphone and adjust the sound level to optimum without causing howling.

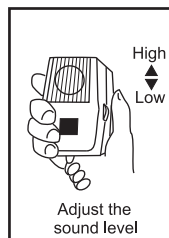

FEATURES

 - Megaphone for hand held or shoulder-slung use (strap supplied).
- Anti-howl microphone on coiled lead with on-off switch and volume control.
- Metal and ABS construction.



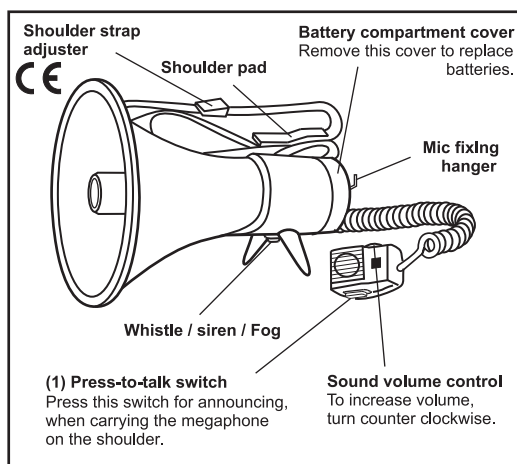


SPECIFICATIONS

- **Power source:**
Option A: 8 x Size C batteries (not included)
Option B: 3 x Size 18650 rechargeable batteries (not included)
- **Audible Range:** 500m-700m (depending on operating conditions)
- **Weight:** 1.65kg (excluding batteries)
- **Dimensions:** 230mm diameter, Length 340mm

BATTERY LOADING

   1. Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.
2. Option A: Remove the black battery casing and insert eight size C batteries in the clear battery cases, observing the correct polarity.
Option B: Insert three size 18650 rechargeable batteries in the black battery casing.
3. Insert the battery case with batteries into the battery compartment of the megaphone observing correct polarity,

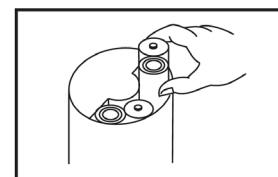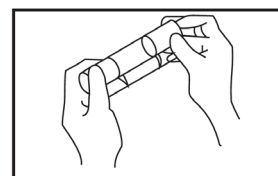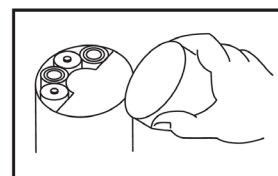

CAUTIONS

1. Make sure the batteries are inserted correctly, observing correct polarity.
2. Remove the batteries when the megaphone is not in use for a long period of time.
3. Drained batteries do not give sufficient sound volume. Replace the batteries at regular intervals.